

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 600mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

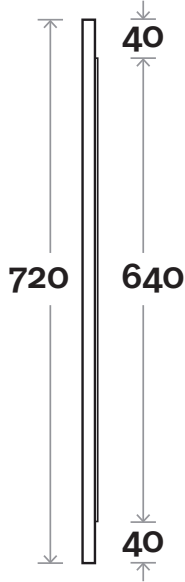

Installation

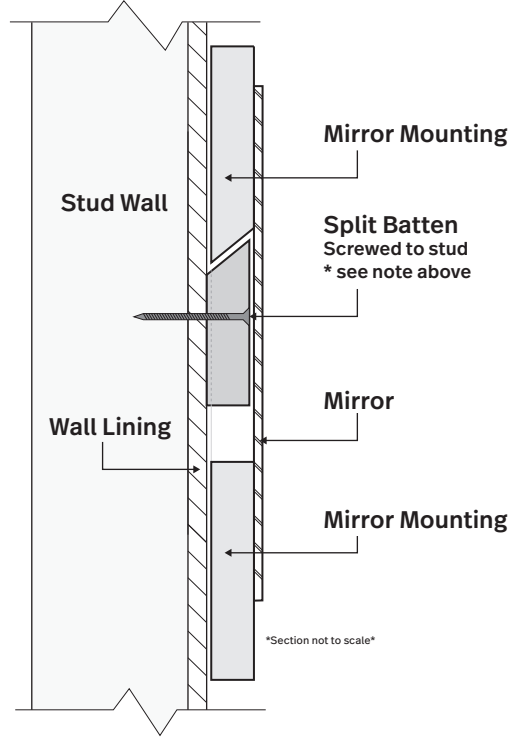

Configuration

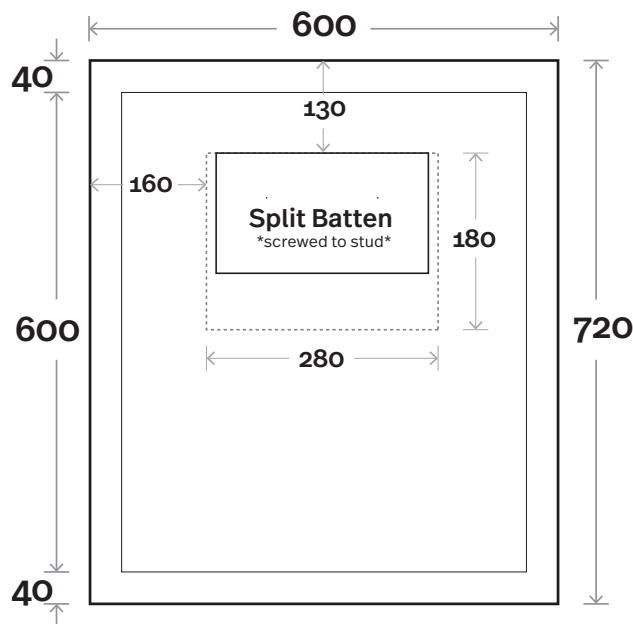

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 750mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

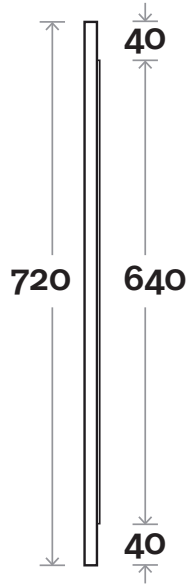

Installation

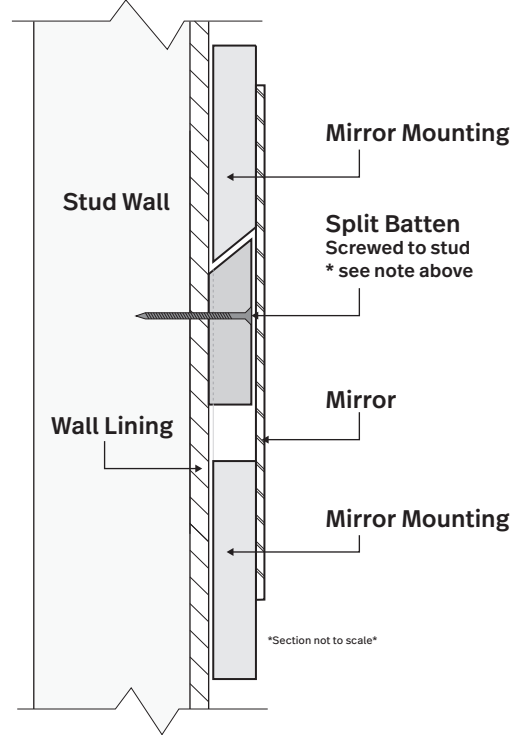

Configuration

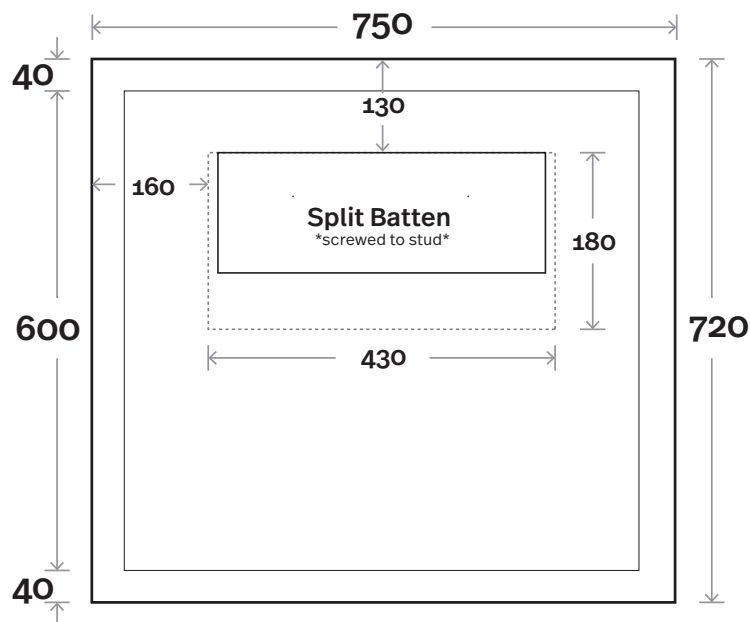

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 900mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

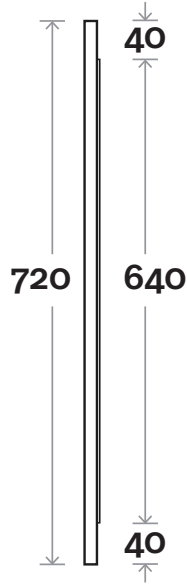

Installation

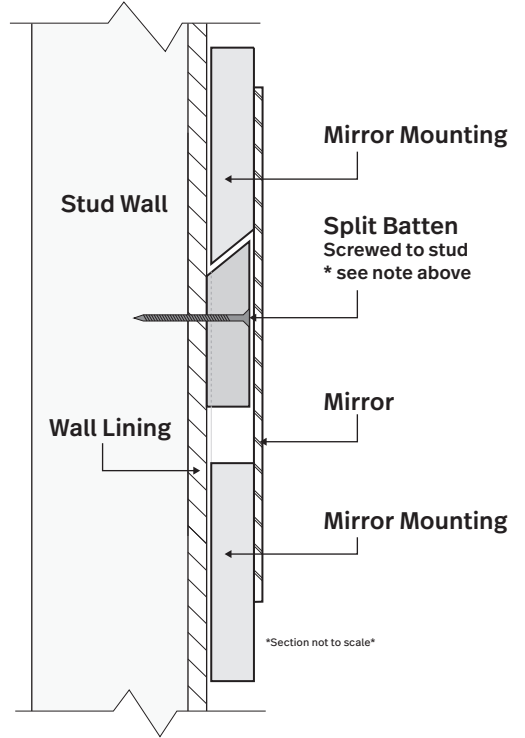

Configuration

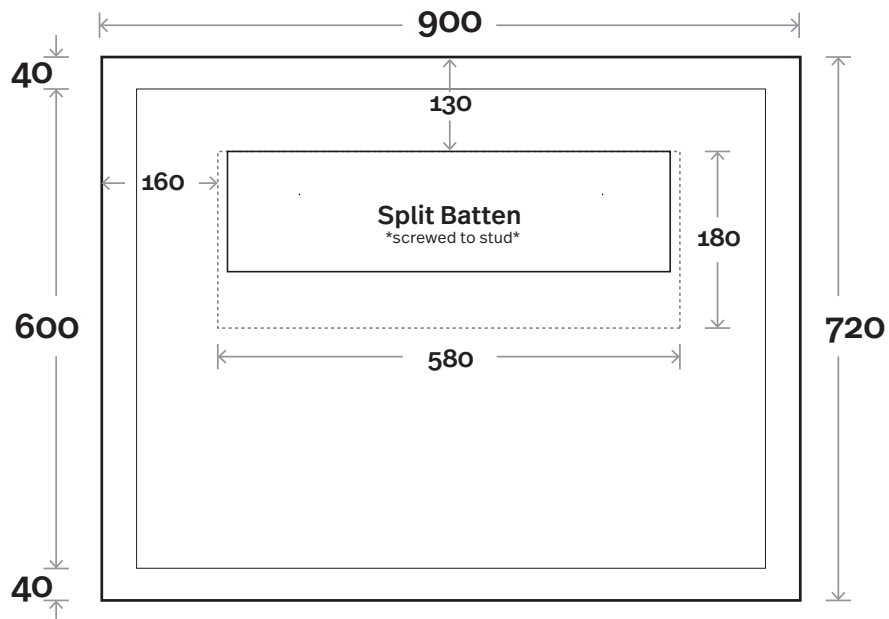

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 1200mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

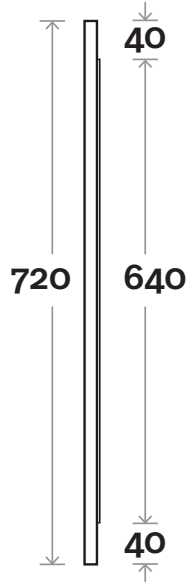

Installation

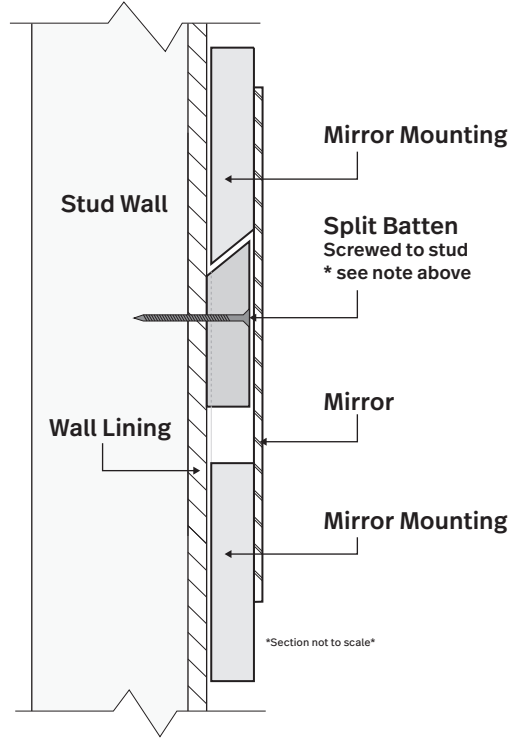

Configuration

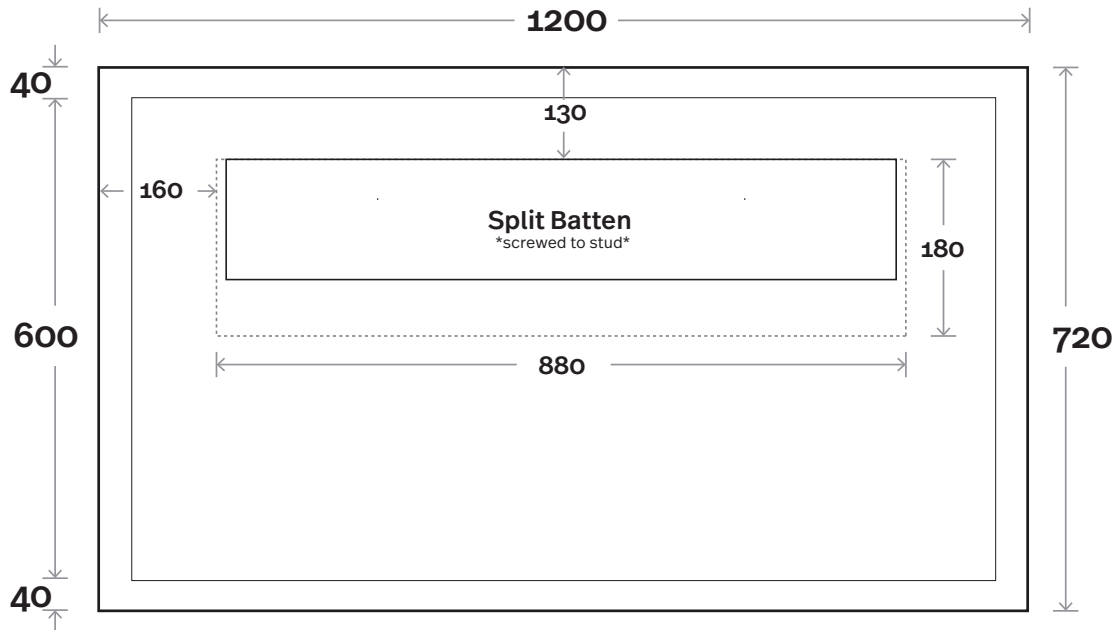

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 1500mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

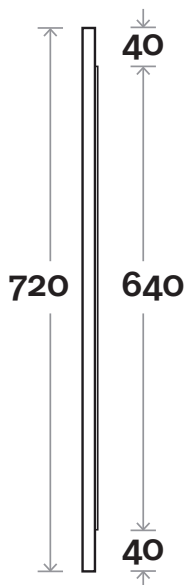

Installation

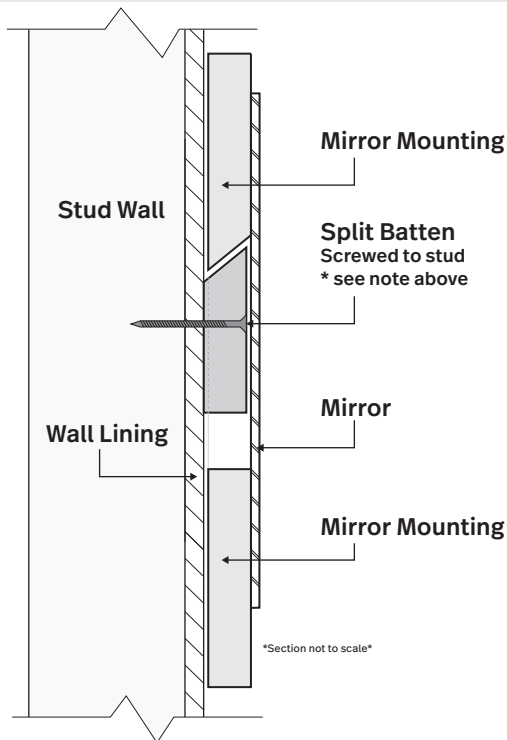

Configuration

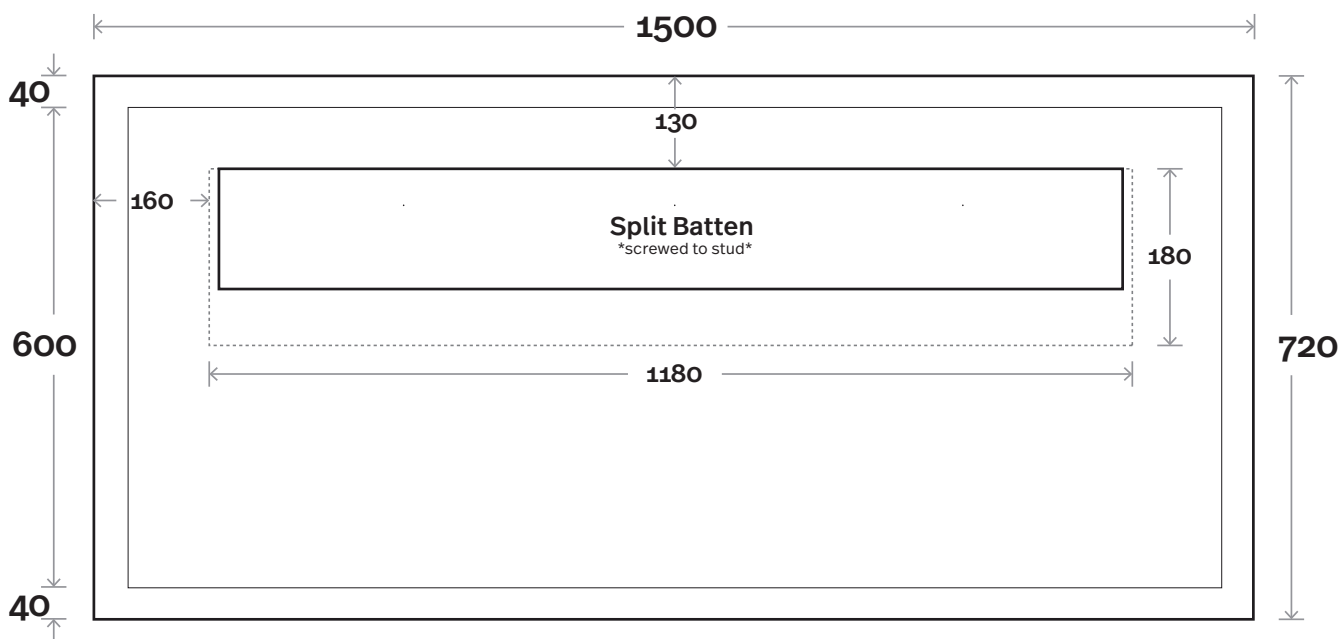

MARQUIS


Mounted Mirror

Duragrain Mounted Mirror 1800mm


Note:

- To avoid scratching the mirror please make sure all screws are counter sunk and below the surface of split batten.


Profile

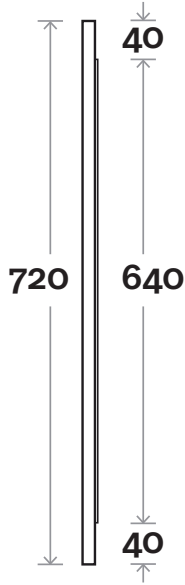

Installation

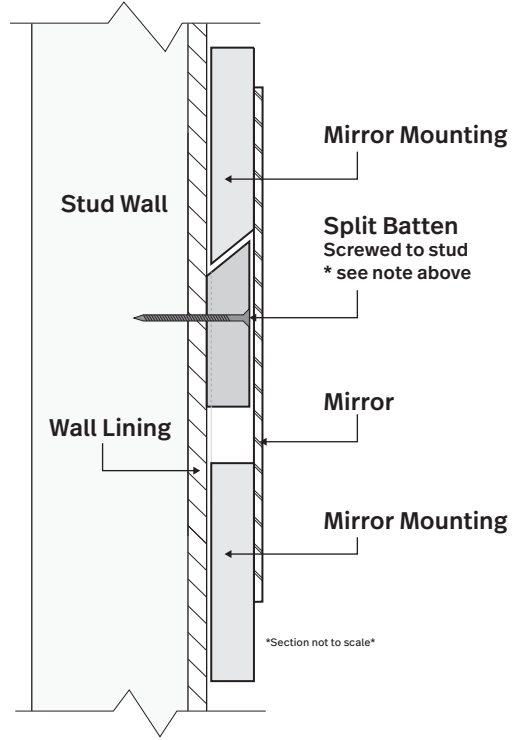

Configuration

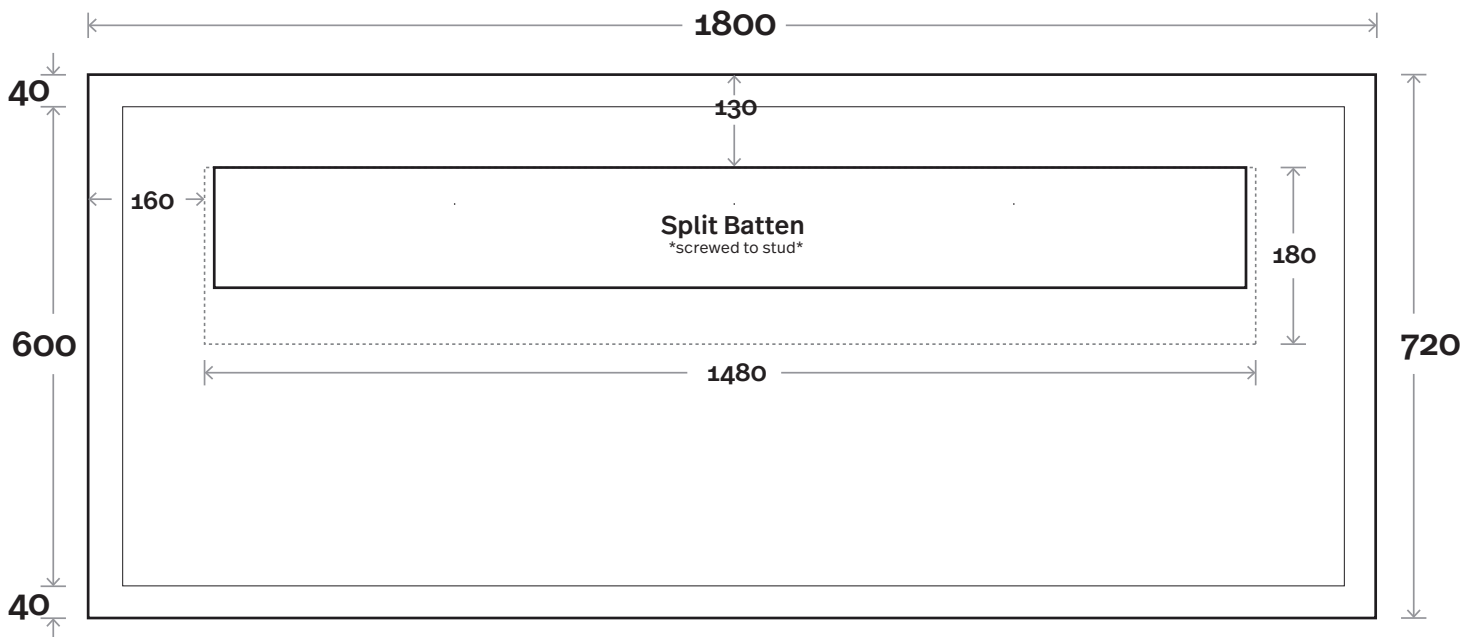

Latest version 11/10/2021